

Micro-Klean™ RB Series

Premium Resin Bonded Filter Cartridges

Micro-Klean™ RB Series Cartridges - Better By Design

The Micro-Klean™ RB series cartridge manufacturing process produces a rigid, resin bonded, graded porosity structure that reduces by-pass and avoids the unloading characteristics of soft and easily deformable competitive meltblown and stringwound filter cartridges. The design of Micro-Klean™ RB series cartridges provides a family of filter cartridges that offer distinct benefits:

- consistent particle reduction efficiencies,
- extended cartridge life,
- ability to withstand high temperatures and elevated differential pressures,
- broad chemical compatibility and
- consistent batch to batch filtration characteristics.

Construction

Micro-Klean™ RB series filter cartridges are the product of continuous refinement of manufacturing and fibre technologies. Available in both grooved and ungrooved versions, Micro-Klean™ RB series filters are ideal for a wide variety of applications. The grooving of the outer surface significantly increases the filter's effective surface area and increases the contaminant holding capacity. The ungrooved version of the Micro-Klean™ RB series cartridge is preferred for the reduction of gels and other deformable contaminants. To provide compatibility with a wide range of process fluids, Micro-Klean™ RB series cartridges are available in different combinations of fibre type and resin (see Table 1).



Features and Benefits

Graded Porosity Design

- Low pressure drop and long life for consistent filtration performance

Rigid Resin Bonded Structure

- No by-pass or unloading with high pressure drops or pressure surges

Grooved Face

- 2.3 times the surface area of competitive ungrooved cartridges for greater dirt loading capacity

Broad Chemical Compatibility

- For chemically aggressive applications

148.8 °C Acrylic Cartridge Multi-length Option

- Ease of installation and removal in high temperature applications (Micro-Klean™ RB series High Temperature Cartridges only)

Broad Range of Ratings from 1 µm to 150 µm

- Wide range of effective applications

Disposal (Must comply with appropriate state and local regulations)

- No metal or plastic cores
- Shreddable
- Crushable
- Incinerable (8 000 btu/lb)

Environmental/Energy Advantage

- Formulation 8 Micro-Klean™ RB series filters with porosity between 1 µm and 75 µm are made from greater than 20% recycled material by weight.

LEED® Claims: Use of this product (1 - 75 micron 8 formulations only) may

- Help comply with LEED® EB v3.0 Prerequisite 1: Sustainable Purchasing Policy
- Help contribute to LEED® EB v3.0 MR Credit 1: Sustainable Purchasing - Ongoing Consumables or LEED® EB v3.0 MR Credit 2: Sustainable Purchasing - Durable Goods

Applications

Paints

Inks

Emulsions

Adhesives

Resins

Organic Solvents

Coolants

Lube Oils

Various Chemicals

Pesticides


Fertilizers

Process Water

General Manufacture Processes

* Micro-Klean™ RB series cartridges are not designed for and should not be used in Food and Beverage and Pharmaceutical applications. Please contact 3M Purification for the appropriate filters for these applications.

The 3M logo is located in the bottom right corner of the page. It consists of the letters '3M' in a bold, red, sans-serif font.

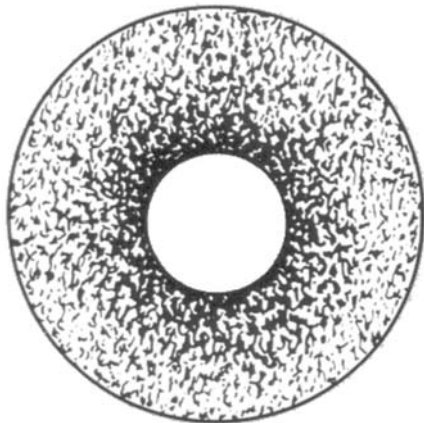

Picture 1
Micro-Klean™ RB Series cartridge cross-section showing true graded porosity design

Cartridge Formulations

Formulation	Fibre	Resin
2	Cellulose / Glass*	Melamine
	Cellulose	Melamine
3	Cellulose / Glass*	Phenolic
	Cellulose	Phenolic
8	Acrylic	Phenolic

*Available only as 1 and 3 micron rated cartridges

Operating Data

Operating Parameters	
Maximum Operating Temperature	Standard Formulation: 121 °C With Polyethylene Foam Flat Gasket: 93 °C With Polypropylene End Modifications: 82 °C
High Temperature Option	With or without Polyester End Modifications: 149 °C
Maximum Differential Pressure	4.8 bar
Recommended Change-out Differential Pressure	2.4 bar
Dimensions	
Length	9 3/4" to 40" (248 - 1016 mm)
Inside Diameter	1 1/16" (26.9 mm)
Outside Diameter	2 19/32" (65.9 mm)

The Micro-Klean™ RB series high temperature cartridge option is recommended for non aqueous applications with operating temperatures from 82 °C to 149 °C. The high temperature cartridge is the standard acrylic fibre and phenolic resin formulation with multi-length bonding using a high temperature adhesive for durability in the installation and removal process. Any end treatment on a high temperature cartridge will be made of polyester.

Cartridge Configurations

Standard Micro-Klean™ RB series filter cartridges are available in multiple lengths with or without various end treatments to fit most major manufacturer's cartridge housings (See Ordering Guide). Note that for applications with operating temperatures greater than 82 °C, use the Micro-Klean™ RB series high temperature cartridge formulation.

Performance

Micro-Klean™ RB series products combine the principles of surface and depth filtration in one cartridge to provide enhanced filter service life, particle removal efficiency and optimum flow characteristics.

Enhanced Service Life

Laboratory testing and extensive field experience has shown that, compared to competitive products of equally reported retention ratings, Micro-Klean™ RB series cartridges can hold up to 2 or more times the contaminant by weight. The grooved face provides 2.3 times the surface area than ungrooved or wrapped cartridges for greater contaminant loading capacity. Additionally, the manufacturing process of Micro-Klean™ RB series cartridges creates significant void volume within the internal matrix to increase loading capacity.

Particle Removal Efficiency

Scheduled non-destructive testing during the manufacturing process provides consistent batch to batch cartridge performance. Micro-Klean™ RB series cartridges particle removal efficiencies provide consistent particulate removal throughout the cartridge life as shown in Graph 1.

Turbidimetric Efficiency

Micro-Klean™ RB series cartridges exhibit a constant and uniform effluent turbidity for nearly 70% of their service life (Graph 2). Non-rigid filters, wound or meltblown, by comparison can exhibit erratic effluent turbidities as they load and unload, indicating by-pass.

Flow Characteristics


For sizing systems and calculating the operating pressure drop of Micro-Klean™ RB series cartridges, use the following procedure to calculate the clean pressure drop of a Micro-Klean™ RB series filtration system. Specific Pressure Drop (SPD) is defined as the pressure drop across a 10" length filter element per flow rate of a 1 Cp fluid. By knowing the SPD of the filter media, the clean operating pressure drop of a filtration system can be quickly calculated by using the following formula:

$$\text{Clean } \Delta p \text{ (mbar)} = \frac{(\text{Total System Flow lpm}) (\text{Viscosity in Cp}) (\text{SPD Value from table})}{(\text{Number of 10" Equivalent Single Length Cartridges in Housing})}$$


Grade	Nominal Rating (Microns)	Specific Pressure Drop (SPD)* (mbar/lpm-Cp)
Y8	1	5.93
A8	3	3.71
B8	5	2.32
C8	10	1.30
F8	25	0.65
L8	50	0.41
Q8	75	0.26
V8	100	0.17
W8	125	0.07
X8	150	0.06
Y2	1	5.49
A2	3	2.69
B2	5	1.48
F2	25	1.30
L2	50	0.83
A3	3	2.78
B3	5	1.48
F3	25	1.19
L3	50	0.72

* Specific pressure drop for a 1 Cp fluid at ambient temperature for a single length equivalent (10") cartridge.

Graph 1: Typical Micro-Klean™ RB series cartridge retention efficiency

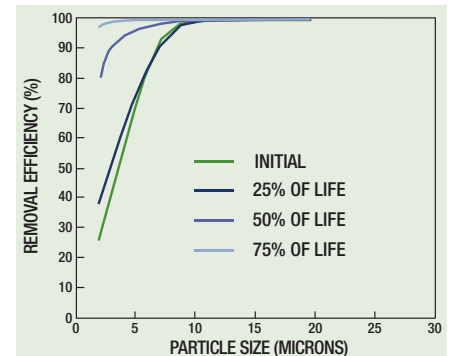

Graph 2: Typical Micro-Klean™ RB series cartridge turbidimetric efficiency to 0.69 bar pressure drop

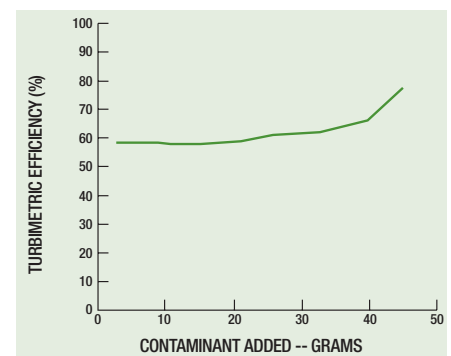

Micro-Klean™ RB Series Cartridge Ordering Guide

Range	Surface Type	Cartridge Length*	Designation Grade - Rating	Formulations Available	Cartridge Length*	Gasket material
MK	G = Grooved	78 = 9 3/4"	Y = 1 µm	2, 8	1	N = None
	U = Ungrooved	80 = 10"	A = 3 µm	2, 3, 8	2	G = Polyethylene Gasket
			B = 5 µm	2, 3, 8	3	X = 316 S.S. Core Extender
			C = 10 µm	8	4	P = Polypropylene Core Extender
			F = 25 µm	2, 3, 8		S = Shrink Wrap
			L = 50 µm	2, 3, 8		T = Tissue Wrap
			Q = 75 µm	8		
			V = 100 µm	8		
			W = 125 µm	8		
			X = 150 µm	8		

Micro-Klean™ RB Series High Temperature

Range	Surface Type	Cartridge Length*	Designation Grade - Rating	Formulations Available	Cartridge Length*	Temperature Option	End Treatment Options**	Gasket material
MK	G = Grooved	78 = 9 3/4"	Y = 1 µm	8	1	H = High Temperature	N = None	N = None
	U = Ungrooved	80 = 10"	A = 3 µm	8	2		X = 316 Stainless Steel Core Extender	A = Silicone
			B = 5 µm	8	3		B = Single Open End, 226 O-ring & Spear	B = Fluorocarbon
			C = 10 µm	8	4		C = Single Open End, 222 O-ring & Spear	C = EPR
			F = 25 µm	8			F = Single Open End, 222 O-ring & Flat Cap	D = Nitrile
			L = 50 µm	8				
			Q = 75 µm	8				
			V = 100 µm	8				
			W = 125 µm	8				
			X = 150 µm	8				

* Cartridge over all lengths will be multiples of either 9 3/4" or 10".

Note: Micro-Klean RB Series is the new name for Micro-Klean III and G cartridges.

** B, C, and F options constructed of polyester.

Important Notice

The information described in this literature is accurate to the best of our knowledge. A variety of factors, however, can affect the performance of the Product(s) in a particular application, some of which are uniquely within your knowledge and control. INFORMATION IS SUPPLIED UPON THE CONDITION THAT THE PERSONS RECEIVING THE SAME WILL MAKE THEIR OWN DETERMINATION AS TO ITS SUITABILITY FOR THEIR USE. IN NO EVENT WILL 3M PURIFICATION BE RESPONSIBLE FOR DAMAGES OF ANY NATURE WHATSOEVER RESULTING FROM THE USE OF OR RELIANCE UPON INFORMATION.

It is your responsibility to determine if additional testing or information is required and if this product is fit for a particular purpose and suitable in your specific application.

3M PURIFICATION MAKES NO REPRESENTATIONS OR WARRANTIES, EITHER EXPRESS OR IMPLIED INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OF ANY OTHER NATURE HEREUNDER WITH RESPECT TO INFORMATION OR THE PRODUCT TO WHICH INFORMATION REFERS.

Limitation of Liability

3M Purification will not be liable for any loss or damage arising from the use of the Product(s), whether direct, indirect, special, incidental, or consequential, regardless of the legal theory asserted, including warranty, contract, negligence or strict liability. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

3M is a trademark of the 3M Company. Micro-Klean is a trademark of the 3M Company used under licence. 'LEED' and related logo is a trademark owned by the U.S. Green Building Council and is used by permission.



3M United Kingdom plc
3M Purification
3M Centre, Cain Road
Bracknell, RG12 8HT
United Kingdom
Tel.: 0845 602 5237
Fax: +44 (0)1344 858559
E-mail: purification.uk@mmm.com



The LEED® (Leadership in Energy and Environmental Design) is an internationally accepted benchmark for green buildings.

For more contact addresses visit our website

Data may be subject to change without further notice.

© 3M 2011. All rights reserved. Please recycle.



SEFILTRA, S.A. C/ La Granja, 62. Pol. Ind. 28108 Alcobendas. Madrid. Apdo 1054
Telf.: 916 616 852 / Fax: 916 617 107. E-mail: comercial@sefiltra.com. Web: www.sefiltra.com

DOC10019
LITCTMKRB1.EU - 1111